

**Guardian®** Portable Filtration System





**Global Filtration Technology** 

Guardian®



Hydraulic Service



Mining

The Guardian portable filtration system is a unique pump/motor/filter combination designed for conditioning and transferring petroleum-based and water emulsion fluids. It protects your system from contamination added with new fluid because new fluid is not necessarily clean fluid. Most new fluids right out of the drum are unfit for use due to high initial concentrations of contaminants. Contamination may be added to a new fluid during processing, mixing, handling, and storage.

fluid during processing, mixing, handling, and storage. The Guardian also circulates and "polishes" fluid in your existing systems to reduce the contamination to an acceptable level.

There are literally hundreds of applications that the Guardian is suited for, with more being discovered each day. If your system is sensitive to the harmful effects of contamination, then the Guardian may be ideal for you.

-Parker

# **Portable Filtration System** Guardian®

FEATURES	I ADVANTAGES I	BENEFITS
Lightweight, hand- held, compact design (less than 24 lbs. 16" X 8" approximate foot print).	Easy to carry and fits easily on top of 55 gallon drums.	One person operation, capable of getting to hard to reach areas.
Flow rate to 4 gpm.	Filters and transfers simultaneously.	One step operation.
Powerful pump/motor combination with Carboxylated Nitrile seals standard.	Handles fluids up to 16,000 SUS viscosity (11,000 SUS -24 VDC).	Reliable performance in a wide variety of operating conditions.
Built-in relief valve with no downstream fluid bypass.	Only filtered fluid reaches downstream components.	100% filtration ensured, even when unattended.
Wide variety of filter elements available.	High capacity 2 micron absolute disposable microglass to 74 micron cleanable wire and water removal.	Maximizes element life between changes.
Clear, wire-reinforced 5' hose assemblies with wand attachments.	No additional hardware required.	Ready to use and easy to maneuver.
Optional quick disconnect hose connections.	Fast, easy setup and tear-down.	Eliminates messy drips.
Heavy-duty ¼ HP, 115 VAC (230 VAC, 24 VDC- optional) motor with thermal overload protection.	UL recognized and CSA listed, with replaceable brushes.	Safe, reliable performance; field serviceable.
Geroter pump with visible serviceable inlet strainer.	Dirt tolerant design with added protection.	Pump reliability in highly contaminated fluids.
Quiet operation.	Less than 70dB noise level @ 3 feet.	Can be used most anywhere with minimal disturbance.
Convenient inlet-to-outlet hose connection.	Contains fluids when transporting.	Clean and safe operation.
Low center of gravity.	Guardian stability.	Unattended reliability.
Dual motor seals.	Added motor protection.	Longer motor life.
Auxiliary inlet/outlet ports.	Used in place of, or in addition to, standard ports. The outlet can also be used as a sampling port.	Flexibility.

Parker

1

14

Guardian®

## Installation and Specification Data

Maximum Allowable Operating Pressure (MAOP): 50 psi (3.4 bar)

Flow Capacity: up to 4 gpm (15 lpm)Maximum Recommended FluidViscosity: (.85 specific gravity)110-120 VAC and220-240 VAC16,000 SUS24VDC11,000 SUS

**Warning:** Explosion hazard. Do not pump flammable liquids such as gasoline, alcohol, solvents, etc.

#### Operating Temperatures:

Unit: -15°F to 180°F (-26°C to 82°C)

Wand/Hose: 25°F to I20°F (-4°C to 49°C)

**Visual Indicator:** differential pressure type, set at 25 psid.

**Recommended Fluids:** petroleum based oils, water emulsions, and diesel fuels.

**Integral Relief Valve:** set at 50 psi for motor protection.


Noise Level: <70db at 3 ft.

Electrical Motor: ¼ hp@2500 rpm. 24 VDC; 10A max. 110-120 VAC; 50/60 Hz; 3A max. 220-240 VAC; 50/60 Hz; 1.5A max. Thermal overload protected. Replaceable brushes (500 hours). Weight: approximately 23 lbs. 5 oz.

#### Materials:

Housing: cast aluminum Cover: die cast aluminum Handle and Indicator: nylon Wands and Hose: PVC Fittings: brass

Seals: fluorocarbon/ carboxylated nitrile

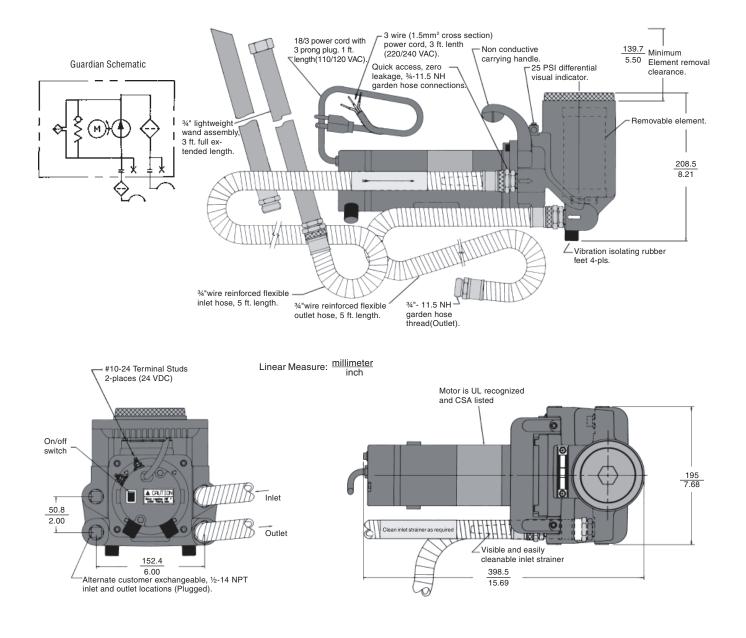

Guardian®

Media	Filter	Time Averaged Beta x/y/z =2/20/75	Dirt Capacity		
Code	Media	Where x/y/z is:	(Grams)		Efficiency
74W	Woven Wire	74 micron <sup>1</sup>	*	Beta	at x
40W	Woven Wire	40 micron <sup>1</sup>	*	Rating	Particle Size
25W	Woven Wire	25 micron <sup>1</sup>	*	B <sub>x</sub> = 2	50.0%
20C	Cellulose	20 micron <sup>1</sup>	*	$B_x = 20$	95.0%
10C	Cellulose	5/8/16	4	~	
20Q	Microglass III	7.1/13.7/17.3	16.2	$B_x = 75$	98.7%
10Q	Microglass III	2.7/7.3/10.3	14.4	B <sub>x</sub> = 200	99.5%
05Q	Microglass III	<2/2.1/4.0	14.9	$B_x = 1000$	99.9%
02Q	Microglass III	<2/<2	14.3		

Multipass test run at 4 gpm to 35 psid

<sup>1</sup>Reference ratings only. Not multipass tested due to coarseness.

\* Not applicable

#### **Estimated Guardian Element Life and Cleanliness Levels**

The following chart shows typical element life (in gallons of oil passed) and cleanliness levels

achieved by standard Parker elements available with the Guardian. Some assumptions have been made.\*

Media	New Oil ISO	ISO Achieved	Element Life	Elements Used per 250 gallons
10C	22/20/16	21/19/15	120 gallons	2.08
20Q	22/20/16	21/19/15	486 gallons	.51
10Q	22/20/16	19/16/14	407 gallons	.61
05Q	22/20/16	17/15/12	330 gallons	.75
02Q	22/20/16	15/13/10	316 gallons	.79


\* 1. New oil is at ISO 22/20/16.

2. No environment or work ingression.

3. Single pass oil transfer.

Viscosity (SUS)

NOTE: Data for fluid transfer only. For continuous fluid polishing, lower ISO cleanliness levels will be achieved.

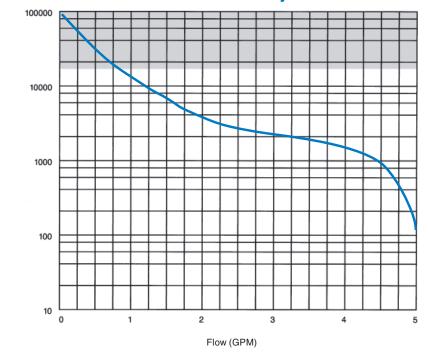

## **Guardian Flow vs. Viscosity Performance**

Note 1: Guardian not recommended for fluid viscosities greater than 16,000 SUS (11,000 SUS;24VDC)

**Note 2**: Flows based on Guardian with no element installed

Guardian®

#### **Guardian Operation**

- **A.** Remove all shipping plugs from the hoses and fittings.
- B. Connect the inlet and outlet hose assemblies to the unit.
- C. Connect the wand assemblies, if required.
- **D.** Place the inlet hose wand assembly into the fluid to be filtered and/or transferred.
- **E.** Place the outlet hose/wand assembly into the container where the fluid discharge is desired.
- **F.** Plug in the unit.
- G. Flip the switch on the end of the unit to the "on" position.

#### NOTE: For no-mess transportation, the inlet and outlet hose assemblies can be screwed together by removing the wand assembly.

## **Element Servicing**

- **A.** Flip the switch on the end of the unit to the "off" position and disconnect the electrical plug.
- **B.** Rotate the cover counter-clockwise and remove.
- **C.** Remove the element from the housing. Discard all disposable elements. These elements are not cleanable,
- **D.** Place the new element In the housing, fitting the o-ring neck into the large hole at the bottom.
- E. Inspect the cover o-ring and replace if necessary.
- F. Replace the cover and hand-tighten.

NOTE 1: It is recommended that the Guardian be cleaned and flushed between uses with dissimilar fluids to prevent fluid mixing.


NOTE 2: Motor brushes may require changeout every 500 service hours

## **Troubleshooting Guide**

Problem	Cause	Solution
Does not start.	ON/OFF switch. No electrical power. Rectifier. Motor overheats (160°F) Defective motor.	Turn switch on, replace switch if defective. Plug in Guardian, check for tripped circuit breakers, check for blown fuses. Replace if defective. Allow motor to cool, thermal overload will automatically reset. Replace motor.
Does not start or erratic motor noise.	Worn motor brushes.	Replace motor brushes.
Intermittent start/ stop operation.	High viscosity fluids. Worn motor brushes. Defective motor.	High viscosity fluids can cause the motor to overheat and cycle intermittently. Replace motor brushes. Replace motor.
Hot motor.	Pumping under heavy load. Defective motor.	It is normal, under a heavy pumping load, for the motor to reach 160°F Replace motor if shell temperature reaches greater than 170°F
No flow or erratic pump noise.	Filter housing not filled with oil. Suction leak. Obstructed outlet. Element dirty. Sheared pump key. Defective Guardian.	Allow Guardian to run a few seconds. Check tightness of inlet fittings and hoses. Check gaskets are in place and are not damaged. Kink or restriction in the inlet hose. Clear outlet. Replace or clean element. Replace woodruff key. Replace unit.
No flow, erratic pump noise, motor overheats.	Gears binding.	Disassemble Guardian and thoroughly clean the gear set. Always use the inlet strainer provided to protect the unit. Replace defective gears.
No suction.	Plugged strainer.	Clean or replace the inlet strainer as required. Clean relief valve. Check for damaged internal o-rings.
Reduced oil flow.	High viscosity fluids. Element dirty. Relief valve sticks or is lodged open. Partially obstructed inlet or outlet hose. Suction leak. Worn gears.	High viscosity fluids can cause reduced flow, which is normal. Replace or clean element. Clean relief valve or replace if defective. Clear the hose obstruction. Check tightness of inlet fittings and hose. Replace gear set.
Indicator moves to RED Area.	Element dirty, Oil extremely cold or viscous. Obstructed outlet. Defective Indicator.	Replace or clean element. Change element to coarser micron rating. Clear outlet obstruction. Replace Indicator.
Indicator does not seem to move.	No element. Defective indicator.	Install element. Replace indicator.
Hoses discolor or are hard.	Fluid compatibility,	Certain fluids, over time, will cause the hoses to discolor. This does not impair their performance. But, some fluids will cause the hoses to become brittle, requiring replacement.
Oil formation under unit.	Defective shaft seal.	Replace the motor shaft seal.



Guardian®

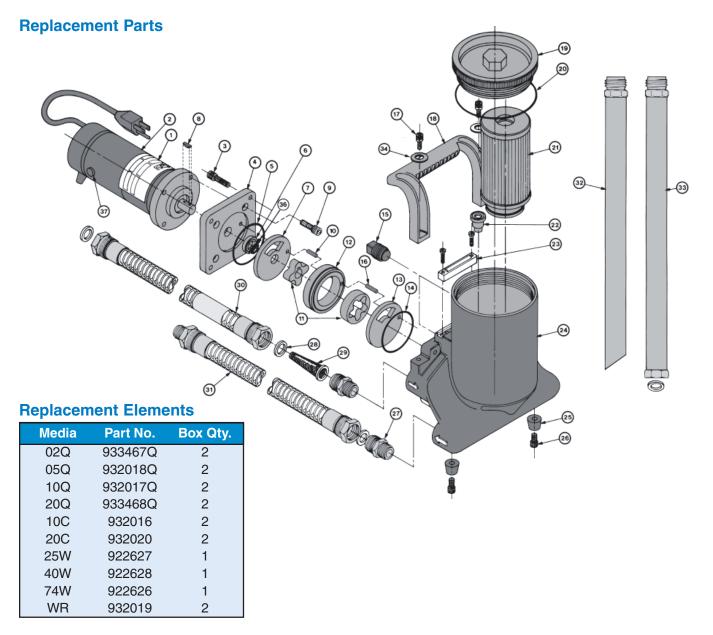

#### **Parts List**

1. Label Consult Factory
2. Motor, 110-120 VAC 931913
220-440 VAC 932381
24 VDC 932759
<b>3.</b> SHCS(4), <sup>1</sup> / <sub>4</sub> -20x1 902734
4. Adapter Plate 931890
5. Housing O-Ring V72041
6. Polypak Seal 931921
7. Shadow Plate 931899
8. Woodruff Key 1/8 × 3/8 931877
<b>9.</b> SHCS(4), <sup>1</sup> / <sub>4</sub> -20 × <sup>3</sup> / <sub>4</sub> 902679
<b>0.</b> Roll Pin <sup>1</sup> / <sub>8</sub> × <sup>3</sup> / <sub>4</sub>
1. Geroter Set 931873

NOTE: SHCS	denotes	"socket	head	cap	screw"
11016.01100	achioteo	000101	nouu	oup	001011

12. Geroter Ring 931903	25. Rubber
13. Outlet Plate	26. SHCS(2
14. Geroter O-ring V72135	27. Brass F
15. Brass Pipe Plug (2) 1/2-14 931920	28. Gasket
<b>16.</b> Roll Pin <sup>1</sup> / <sub>8</sub> × <sup>5</sup> / <sub>8</sub>	29. Inlet Sc
<b>17.</b> SHCS (2), 1/4-20 ×5/8 931889	30. Inlet Ho
18. Handle	31. Outlet H
19. Cover	32. Wand C
20. Cover O-Ring V72237	<b>33.</b> Wand A
21. Element	34. Washer
22. Relief Valve 928981	35. Quick D
23. Indicator Kit 927422	(Not Sh
24. Housing 931838	36. Washer
	37. Brush k
	(2

<b>25.</b> Rubber Bumpers (2)	
26. SHCS(2), ¼-20 x ½	902907
27. Brass Fitting (2)	
28. Gasket (4)	931956
29. Inlet Screen	931927
30. Inlet Hose Assembly	931936
31. Outlet Hose Assembly	931937
32. Wand Crevice Assembly	931965
33. Wand Adapter Assembly	931966
34. Washer (2)	
35. Quick Disconnect Kit	932097
(Not Shown)	
36. Washer	932085
37. Brush Kit (110/120)	934329
(220/240 VAC)	934327
(24 VDC)	932761
Seal Kit	
Bowl Extension Kit	

Guardian®

#### HOW TO ORDER:

Select the desired symbol (in the correct position) to construct a model code. **Example:** 

BOX 1	BOX 2	BOX 3	BOX 4	BOX 5
	GT4	10C	1	Design number assigned by Parker

BOX 1: SEA	ALS Description	BOX 3 : ME Symbol	EDIA Description	BOX 4 : OI Symbol	PTIONS Description
None	Carboxylate Nitrile (Standard)	74W 40W	Wire Mesh Wire Mesh	<b>1</b> 6	<i>None</i> Quick disconnect
Note: Consult fa compatib	actory for fluids not e with fluorocarbon	25W 20C <b>10C</b> 20Q	Wire Mesh Cellulose <i>Cellulose</i> Microglass III		hose connections
BOX 2 : MODEL Symbol Description		10Q 05Q 02Q	Microglass III Microglass III Microglass III Microglass III	BOX 5 : DE Symbol	ESIGN NUMBER Description
<b>GT4</b> GT4 D GT4 E	Guardian <sup>®</sup> 110/120 VAC 24VDC 220/240 VAC	WR	Water Removal	Hydraulic F full model of	the Guardian by Parker Filter Division. Use the code, including the design en ordering replacement pa

Please note the bolded options reflect standard options with a reduced lead-time. Consult factory on all other lead-time options.

